


ATTACH QUICKFRAME JAMB
TO BOTTOM TRACK WITH
WITH SCREWS

BOTTOM TRACK

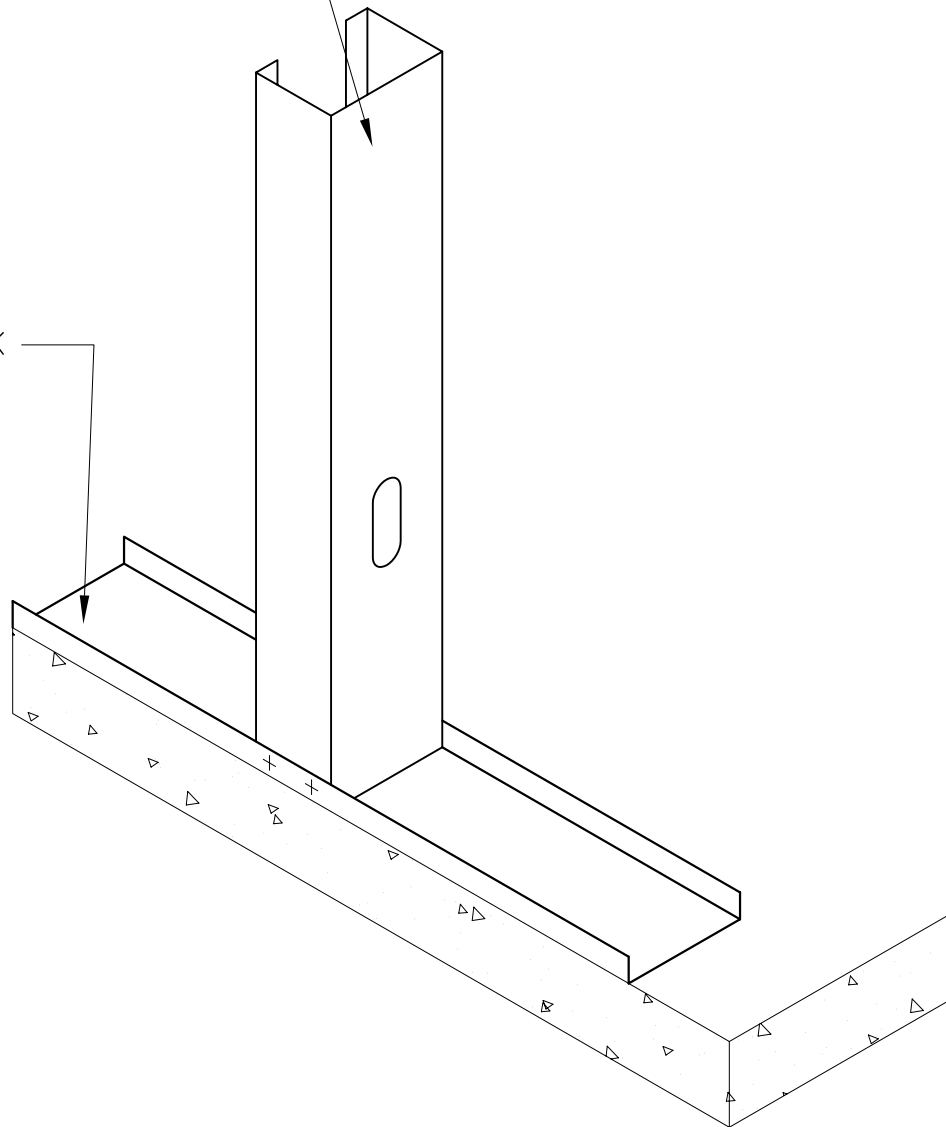

QUICKFRAME JAMB ANCHORAGE

Marino\WARE

11. CURTAINWALL DETAIL