


FOR ATTACHMENT OF  
DEFLEX CLIPS TO WALL  
STUDS: TIGHTEN SCREWS,  
THEN BACK OFF 1/2 TURN.

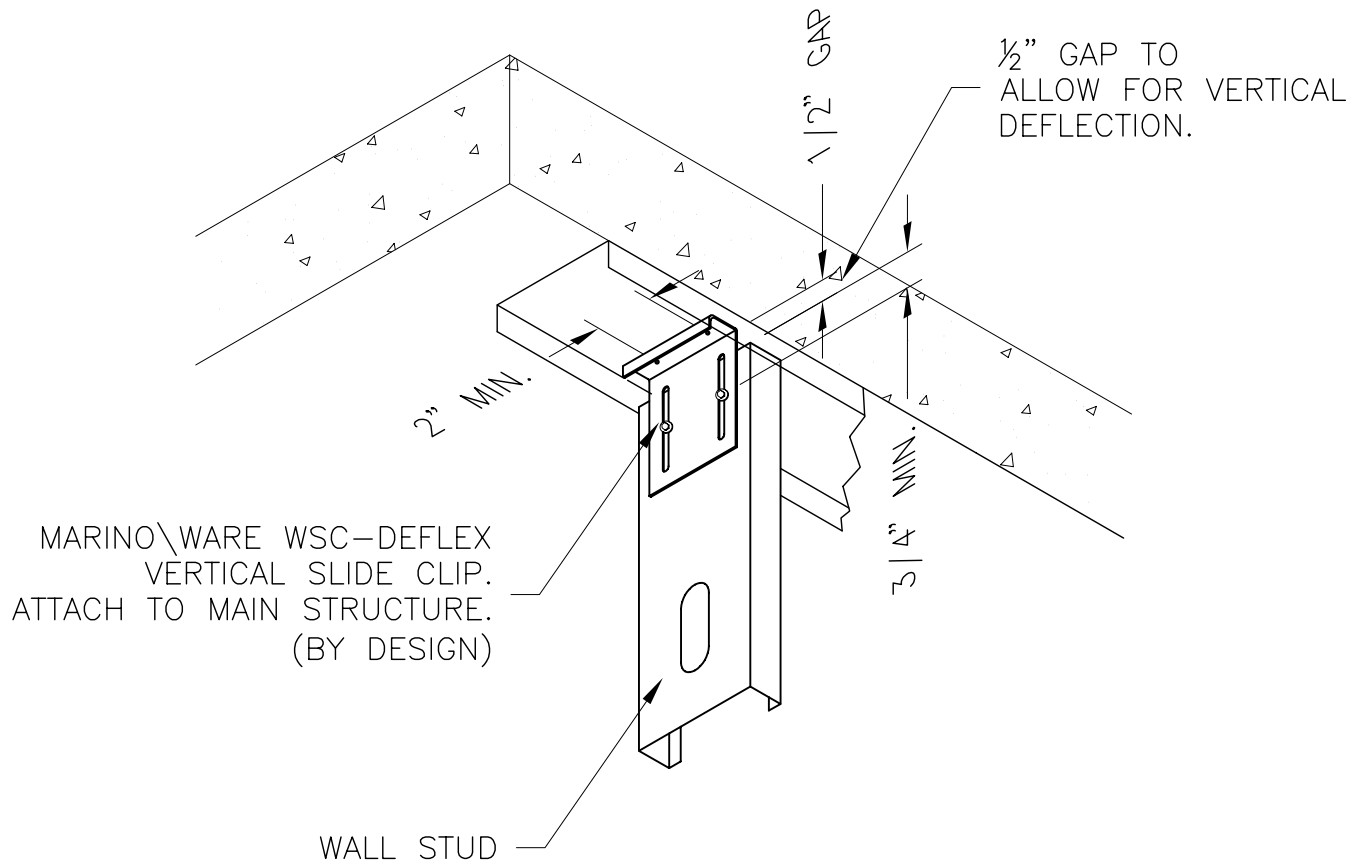

DEFLEX VERTICAL SLIDE CLIP

## Marino\WARE 18. FRAMERITE CONNECTORS