


ATTACH TRACK TO JOISTS
AT EACH JOIST FLANGE.

ATTACH JOIST TO BEAM
WITH P.A.F.S. AT EACH
JOIST FLANGE.

ATTACH WEB STIFFENER
TO TRACK AT EACH JOIST.

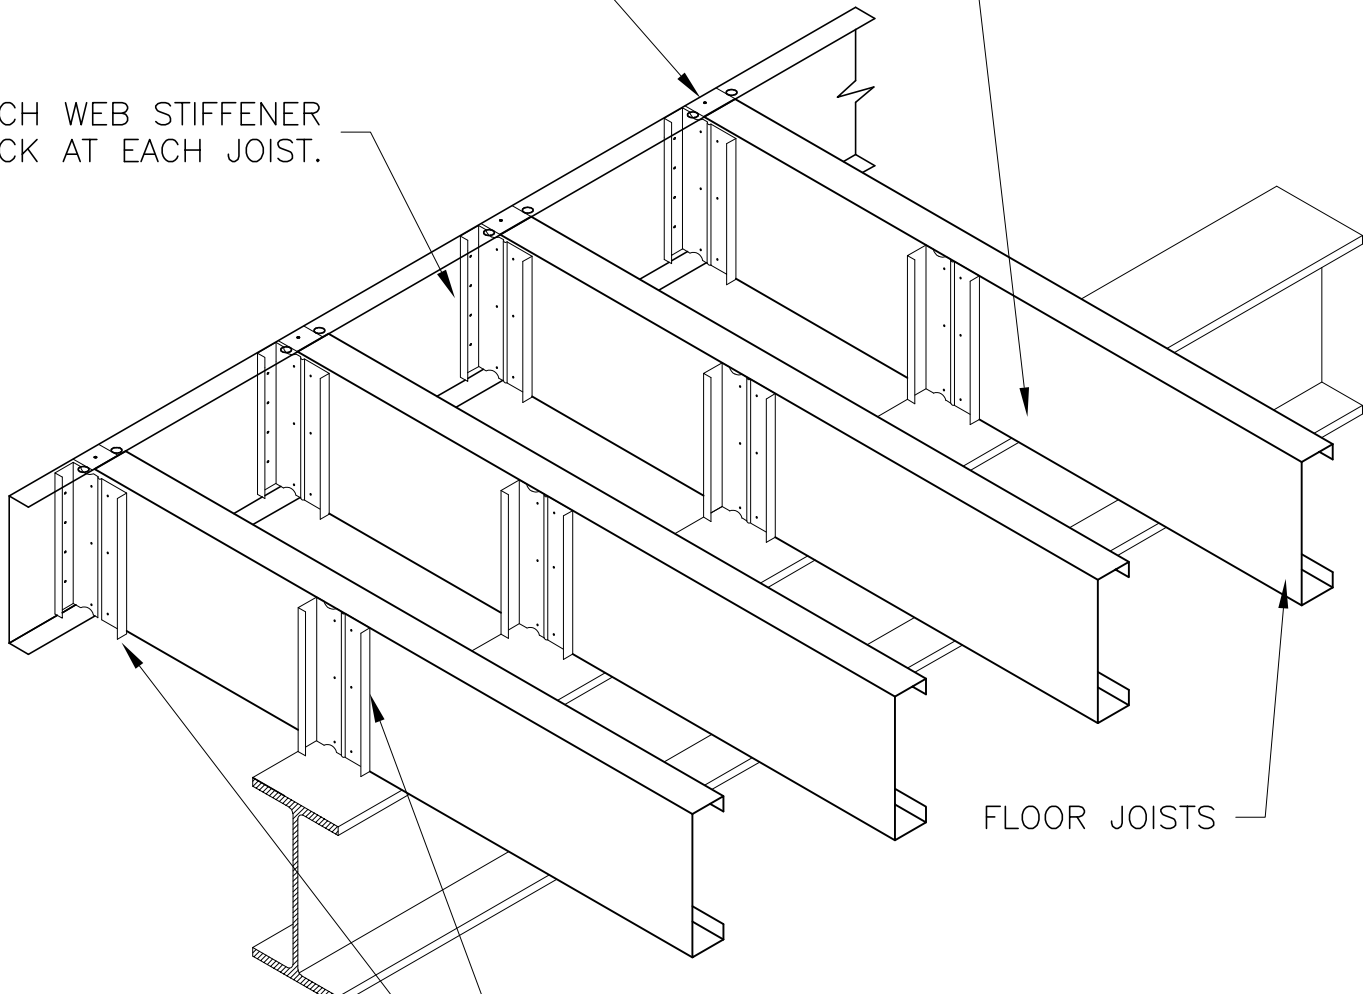

FLOOR JOISTS

STRUCTURAL BEAM
(BY OTHERS)

ATTACH WEB STIFFENER
AT EACH JOIST.

JOIST BEARING ON STRUCTURAL BEAM
(CANTILEVERED CONDITION)

Marino\WARE

J10 - JOIST CONNECTION