


TRACK SOLID BLOCKING
 @ 10'-0" o.c. MAX.
 MAKE RUNNER TRACK 8" LONGER
 THAN STUD INSIDE SPACING. CLIP
 FLANGES OF TRACK 4" FROM
 EACH END. BEND TRACK
 AT CLIPPED FLANGES.

COILED STRAP OR FLAT STRAP,
 SCREW ATTACH TO EACH STUD
 FLANGE AS REQUIRED.

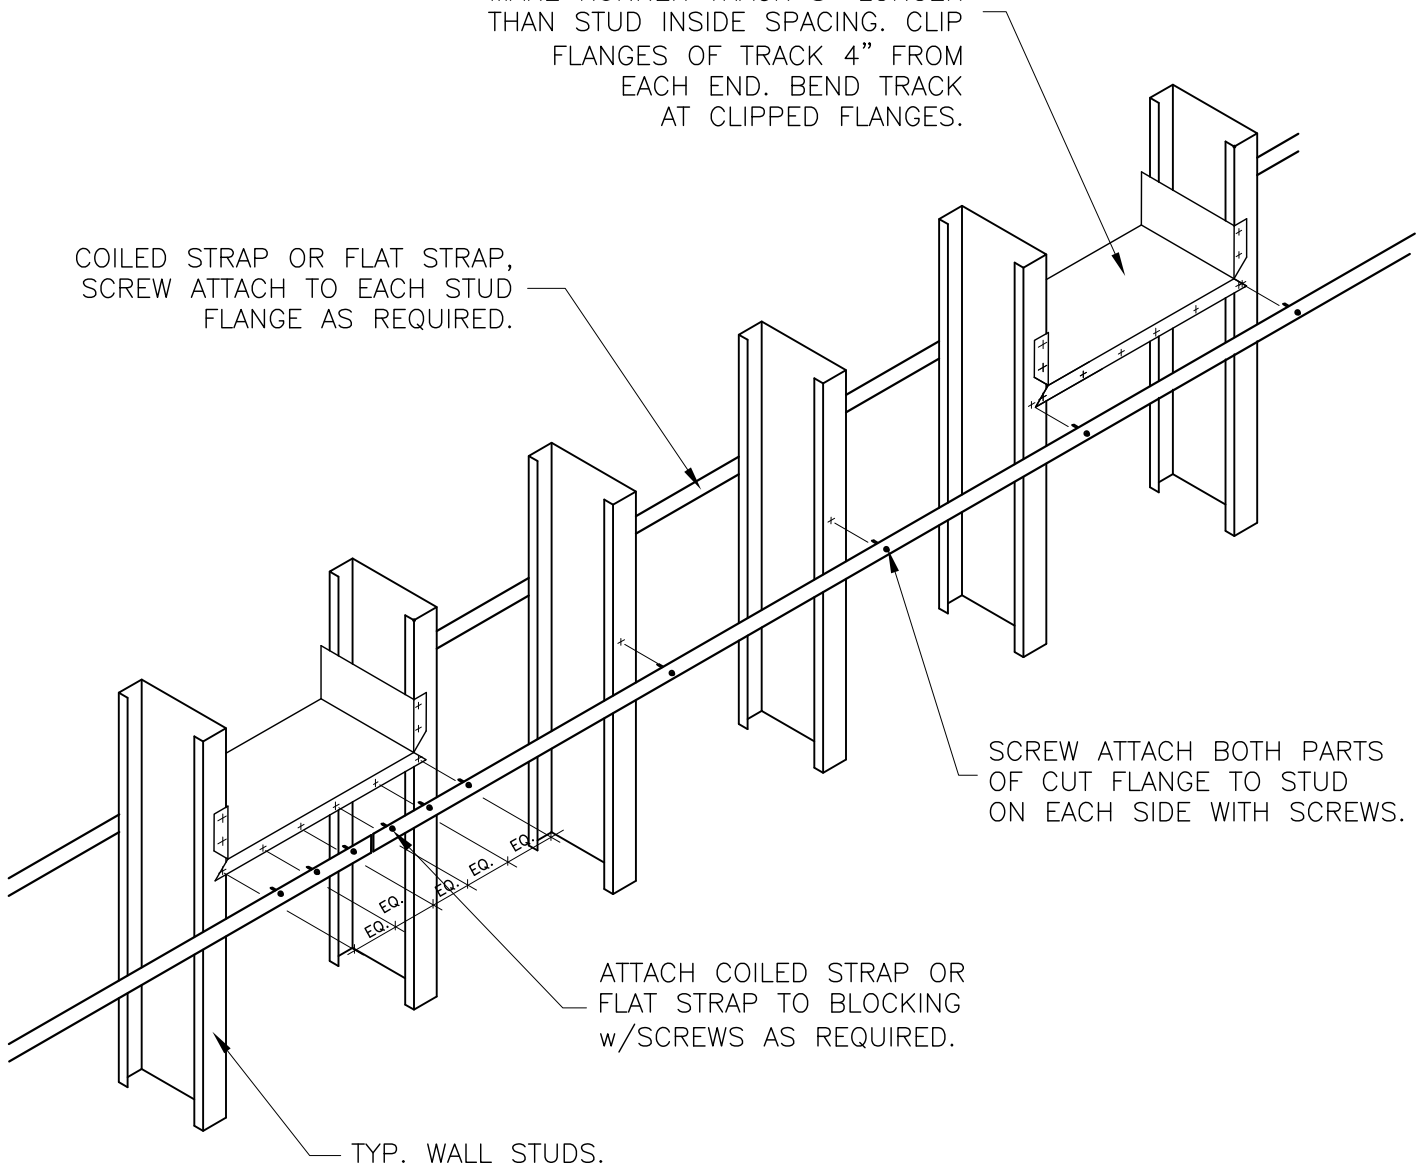

SCREW ATTACH BOTH PARTS
 OF CUT FLANGE TO STUD
 ON EACH SIDE WITH SCREWS.

ATTACH COILED STRAP OR
 FLAT STRAP TO BLOCKING
 w/SCREWS AS REQUIRED.

TYP. WALL STUDS.

TRACK BLOCKING AND STRAP BRIDGING



Design Group

A Division of Ware Industries

100 Hendrick Dr., Suite 200, McDonough, GA 30253

The calculations and/or sketches contained herein are supplied solely to assist in the selection and/or analysis of Marino\WARE® products. The calculations and/or sketches are preliminary in nature and are not intended to replace the calculations and/or sketches and services of the Architect or Engineer of Record. Marino\WARE® in rendering such calculations and/or sketches shall in no way be deemed to assume any professional responsibility and hereby disclaims any and all such liability or obligation.